














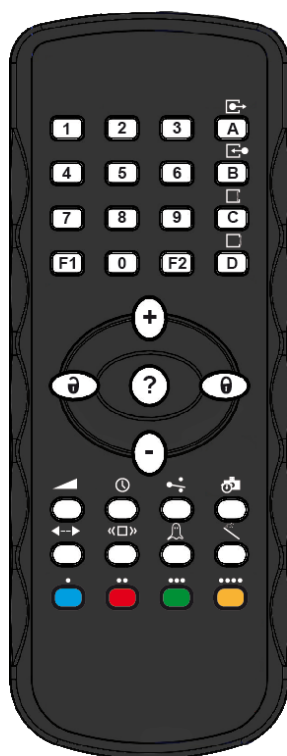
REMOTE CONTROL

How to use the remote control?













KEYS

PARAMETERS


-  External monitoring / test
-  IR-detection field
-  Uncovered zone
-  Mounting height / Frequency
-  Output redirection
-  Door control
-  Detection field size
-  Hold time
-  Detection mode
-  Radar immunity filter
-  Output configuration
-  Max. duration of presence detection
-  IR-immunity filter







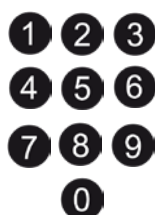


Laser Scanner

-  Field dimensions - optional - width
-  Field dimensions - optional - height
-  Field dimensions - safety - width
-  Field dimensions - safety - height
-  Detection field redirection
-  Uncovered zone
-  Object size
-  Output activation delay
-  Active curtains
-  Mounting side
-  Output configuration
-  Immunity filter





VALUES



GENERAL KEYS

-  Unlock
-  Lock
-  Check value
-  Increase by 1
-  Decrease by 1
-   Setup / Teach-in
Factory values
Presettings

COLOUR KEYS

Flatscan		Widescan
	/	Virtual pull cord
	Safety	Safety
	Movement	Reopening
	/	Presence

USE



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.



If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.

 


To end an adjustment session, always lock the sensor.

ADJUSTING ONE OR MORE PARAMETERS




CHECKING A VALUE




X = number of flashes = value of the parameter

 RESTORING TO FACTORY VALUES



* When no green LED is available, the signal is red.

 SAVING AN ACCESS CODE




The access code (1-4 digits) is recommended to set sensors that are installed close to each other.

CHANGING AN ACCESS CODE



Enter the existing code

 DELETING AN ACCESS CODE



Enter the existing code

If you forget the access code, proceed as follows:



Unpower & power the sensor

1 Min.

During 1 minute, you can access the sensor without access code



LED flashes quickly



LED flashes



LED flashes slowly



LED flashes once



LED is off

